

Gas Conditioning Unit Series PSS[®]

SS5C, SS5C/2, SS5C/3, SS5C-19"

Instruction Manual
Version 1.02.01



**Dear customer,**

Thank you for buying our product. In this manual you will find all necessary information about this M&C product. The information in the manual is fast and easy to find, so you can start using your M&C product right after you have read the manual.

If you have any question regarding the product or the application, please don't hesitate to contact M&C or your M&C authorized distributor. You will find all the addresses in the appendix of this instruction manual.

For additional information about our products, please go to M&C's website www.mc-techgroup.com. There you can find the data sheets and manuals of our products in German and English.

This instruction manual does not claim completeness and may be subject to technical modifications.

© 08/2023 **M&C TechGroup** Germany GmbH. Reproduction of this document or its content is not allowed without permission from **M&C**.

PSS® is a registered trademark.

With the release of this version all older manual versions will no longer be valid. The German instruction manual is the original instruction manual. In case of arbitration only the German wording shall be valid and binding.

Version: 1.02.01

List of Contents

1	General information	5
2	Declaration of conformity	5
3	Safety instructions	6
3.1	Intended use.....	6
4	Warranty	6
5	Used terms and signal indications	7
5.1	Type plate.....	8
6	Introduction	9
7	Function of the M&C Jet-Stream heat exchanger	9
8	Application	10
9	Technical data	12
10	Description	14
11	Operating instructions	19
11.1	Main menu.....	19
11.2	PIN entry.....	20
11.3	Set point entry.....	21
12	Parameter setting	22
12.1	Setting temperature alarm limits	23
12.2	Fan speed setting	24
12.3	Brightness setting of display.....	24
13	Option: mA output for the temperature measurement inside the cooling block	25
13.1	mA output range selection.....	25
13.2	mA output calibration for the temperature measurement inside the cooling block.....	25
14	Option: liquid alarm sensor (LA) type LA1S	27
14.1	Activating the LA.....	27
14.2	LA sensitivity adjustment.....	28
14.3	LA calibration.....	29
15	Receipt of goods and storage	29
16	Installation instructions	30
16.1	Option: liquid alarm sensor with switch-off function for sample gas pump.....	30
17	Hose connections	31
18	Electrical connections	32
19	Preparations for commissioning	34
20	Commissioning	35
21	Closing down	36
22	Maintenance	37
24	Trouble shooting	39
25	Proper disposal of the device	40
26	Spare parts list	41
27	Risk assessment	42
28	Appendix	45

List of Figures

Figure 1	Type plate	8
Figure 2	Diagram of the heat exchanger function.....	9
Figure 3	Gas flow diagram of the SS5C, SS5C/3 and SS5C-19"	10
Figure 4	Gas flow diagram of the SS5C/2	11
Figure 5	Dimensions and design: SS5C and SS5C/3	14
Figure 6	Dimensions and design of the SS5C-19" front.....	15
Figure 7	SS5C-19", side view	15
Figure 8	SS5C-19", rear view.....	16
Figure 9	Dimensions and design: SS5C/2	17
Figure 10	Navigating through the main menu.....	19
Figure 11	Reaching the set point entry from the ECP1000C/ECP3000C main menu.....	21
Figure 12	Temperature alarm limits and hysteresis.....	23
Figure 13	LA alarm limits.....	28
Figure 14	Electrical connections for 230 V.....	32
Figure 15	Electrical connections for 115 V	33
Figure 16	Overview risk assessment	43
Figure 17	Circuit diagram SS5C, SS5C-19", SS5C/2 and SS5C/3	46

HEAD OFFICE

M&C TechGroup Germany GmbH ♦ Rehhecke 79 ♦ 40885 Ratingen ♦ Germany

Telephone: 02102 / 935 – 0

Fax: 02102 / 935 – 111

E - mail: info@mc-techgroup.com

www.mc-techgroup.com

1 GENERAL INFORMATION

The product described in this instruction manual has been built and tested in our production facility.

All M&C products are packed to be shipped safely. To ensure the safe operation and to maintain the safe condition, all instructions and regulations stated in this instruction manual need to be followed. This instruction manual includes all information regarding proper transportation, storage, installation, operation and maintenance of this product by qualified personnel.

Follow all instructions and warnings closely.

Read this manual carefully before commissioning and operating the device. If you have any questions regarding the product or the application, please don't hesitate to contact M&C or your M&C authorized distributor.

2 DECLARATION OF CONFORMITY



The product described in this operating manual complies with the following EU directives:

EMV-Instruction

The requirements of the EU directive 2014/30/EU "Electromagnetic compatibility" are met.

Low Voltage Directive

The requirement of the EU directive 2014/35/EU "Low Voltage Directive" are met.
The compliance with this EU directive has been examined according to DIN EN 61010.

RoHS Directive

The requirements of the RoHS2 ('Restriction of Hazardous Substances 2') directive 2011/65/EU and its annexes are met.

Declaration of conformity

The EU Declaration of conformity can be downloaded from the M&C homepage or directly requested from M&C.



3 SAFETY INSTRUCTIONS

Follow these basic safety procedures when mounting, starting up or operating this equipment:

Read this operating manual before starting up and use of the equipment. The information and warnings given in this operating manual must be heeded.

Any work on electrical equipment is only to be carried out by trained specialists as per the regulations currently in force.

Attention must be paid to the requirements of VDE 0100 (IEC 364) when setting high-power electrical units with nominal voltages of up to 1000 V, together with the associated standards and stipulations.

Check the details on the type plate to ensure that the equipment is connected to the correct mains voltage.

Protection against touching dangerously high electrical voltages:

Before opening the equipment, it must be switched off and hold no voltages. This also applies to any external control circuits that are connected.

The device is only to be used within the permitted range of temperatures and pressures.

Check that the location is weather protected. It should not be subject to either direct rain or moisture.

The gas conditioning systems SS5C-19", SS5C, SS5C/2 and SS5C/3 must not be used in hazardous areas.

Installation, maintenance, monitoring and any repairs may only be done by authorized personnel with respect to the relevant stipulations.

3.1 INTENDED USE

The SS5C-19", SS5C, SS5C/2 and SS5C/3 gas conditioning units are intended for use in general purpose areas (non-hazardous environments). The units can only be operated in compliance with the information in chapter 9 Technical data. You must meet the requirements of the ambient temperature and pressure characteristics in particular.

Do not use this product for any other purpose. Improper use and handling can create hazards and cause damage. For more information, please refer to the safety information in this instruction manual.

4 WARRANTY

In case of a device failure, please contact immediately M&C or your M&C authorized distributor.

We have a warranty period of 12 months from the delivery date. The warranty covers only appropriately used products and does not cover the consumable parts. Please find the complete warranty conditions in our terms and conditions.

The warranty includes a free-of-charge repair in our production facility or the free replacement of the device. If you return a device to M&C, please be sure that it is properly packaged and shipped with protective packaging. The repaired or replaced device will be shipped free of delivery charges to the point of use.

5 USED TERMS AND SIGNAL INDICATIONS



Danger

This means that death, severe physical injuries and/or important material damage **will occur** in case the respective safety measures are not fulfilled.



Warning

This means that death, severe physical injuries and/or important material damage **may occur** in case the respective safety measures are not fulfilled.



Caution

This means that minor physical injuries **may occur** in case the respective safety measures are not fulfilled.

Caution

Without the warning triangle means that a material damage may **occur** in case the respective safety measures are not met.



Note

These are important information about the product or parts of the operating manual which require user's attention.

Qualified Personnel

These are persons with necessary qualification who are familiar with installation, use and maintenance of the product.



High voltages!

Protect yourself and others against damage which might be caused by high voltages.



Toxic!

Acute toxicity (oral, dermal, inhalation)! Toxic when in contact with skin, swallowed or inhaled.



Corrosive!

These substances destroy living tissue and equipment upon contact. Do not breathe vapors; avoid contact with skin and eyes.



Hot surface!

Contact may cause burn! Do not touch!



Caution, risk of being crushed due to rotating parts.

Do not open the device. Use personal protective equipment (PPE).



Wear protective gloves!
Working with chemicals, sharp objects or extremely high temperatures requires wearing protective gloves.



Wear safety glasses!
Protect your eyes while working with chemicals or sharp objects. Wear safety glasses to avoid getting something in your eyes.



Wear protective clothes!
Working with chemicals, sharp objects or extremely high temperatures requires wearing protective clothes.



Use foot protection

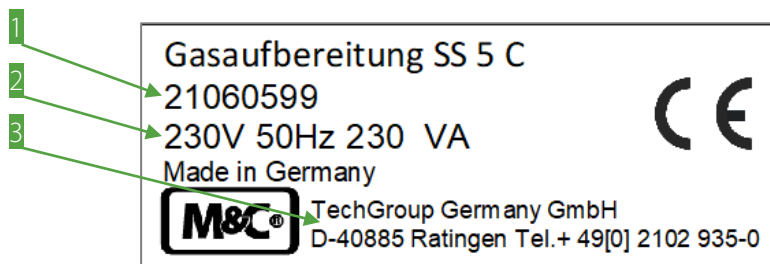


Use safety helmet and full protective goggles

5.1 TYPE PLATE

A type plate is located on the device.

The type plate contains the product name, the serial number, electrical connection data and the manufacturer's address.



- 1 Serial number digits 1+2: Year, digits 3+4: Month, digits 5 to 8: consecutive number
2 Electrical connection data
3 Manufacturer's address

Figure 1 Type plate

6 INTRODUCTION

The unit, which is mounted on an aluminium plate, is a complete sample gas conditioning unit suitable for continuous use and can be easily integrated into analytical systems. This minimizes the effort for the procurement of individual components and small parts as well as the assembly of the individual parts.

The compact design only requires a small amount of space. The system is ready for operation in just a few minutes.

7 FUNCTION OF THE M&C JET-STREAM HEAT EXCHANGER

The **ECPX000C** gas coolers, specially developed for analysis technology, are designed for maximum flow rates of up to 350 NI/h. They are also installed as system assemblies in the SS5C-19", SS5C, SS5C/2 and SS5C/3.

Jet-Stream heat exchangers are available in Duran glass, stainless steel (316Ti) and PVDF (polyvinylidene fluoride). The selection of the appropriate heat exchanger material is customer specific. The heat exchangers are easily accessible and easily replaceable in a heat-insulated cooling block. Figure 2 shows a schematic diagram of the heat exchanger function.


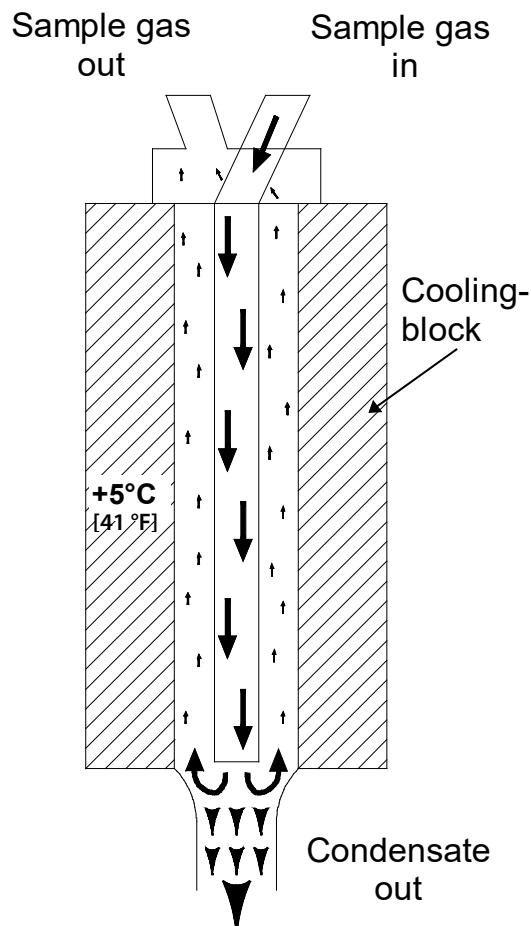


Figure 2 Diagram of the heat exchanger function

8 APPLICATION

The gas conditioning units **SS5C**, **SS5C/2**, **SS5C/3** and **SS5C-19"** are ideally suited for both intermittent and continuous operation.

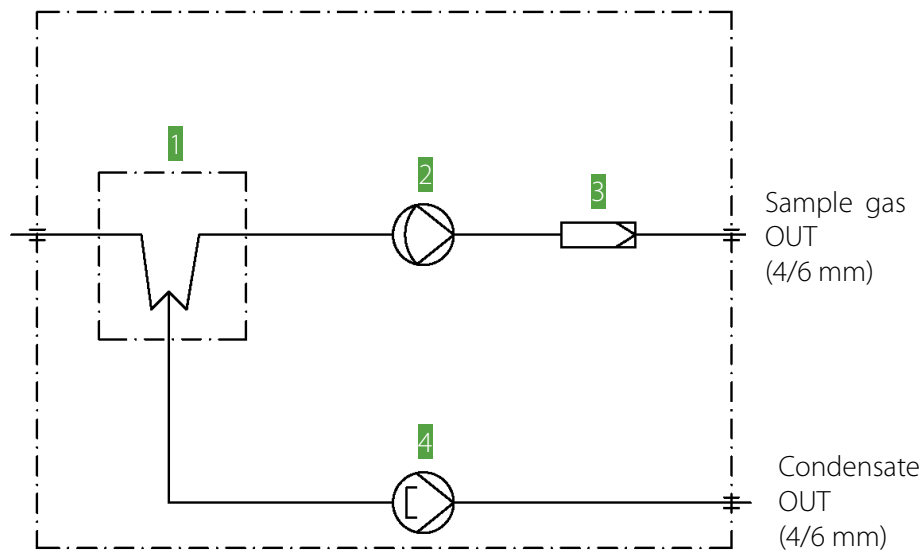The components of the systems **SS5C**, **SS5C/2**, **SS5C/3** and **SS5C-19"** are intended for "standard use". We also provide a wide range of additional equipment and other components if special measurements are required.




1 Gas cooler ECP1000C or ECP3000C

3 Fine filter FP-2T, filter element porosity 2 μm

2 Sample gas pump N3 KPE, N5 KPE or N9 KPE

4 Peristaltic pump SR25.2-W for continuous removal of condensate

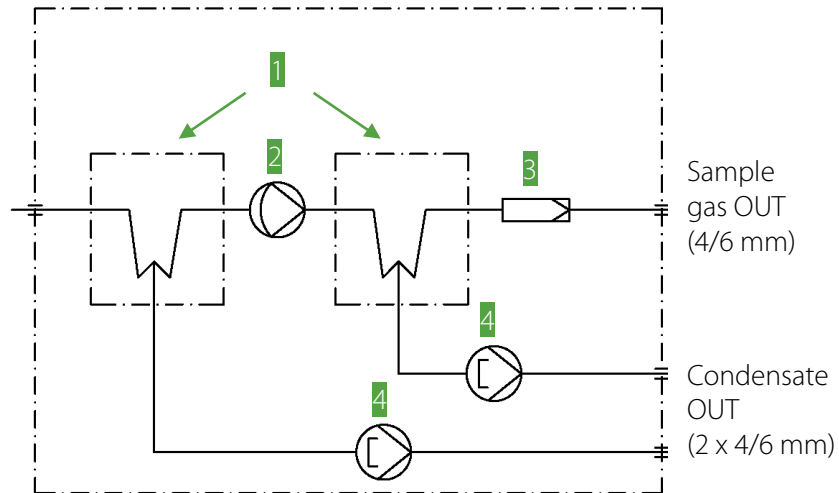Figure 3 Gas flow diagram of the SS5C, SS5C/3 and SS5C-19"



1 Gas cooler ECP2000C with two heat exchangers

3 Fine filter FP-2T, filter element porosity 2 μm

2 Sample gas pump N3 KPE, N5 KPE or N9 KPE

4 2 x Peristaltic pumps type SR25.2-W for continuous removal of condensate

Figure 4 Gas flow diagram of the SS5C/2

9 TECHNICAL DATA

Gas Conditioning Type	SS5C-19"	SS5C	SS5C/2	SS5C/3
Part No. version 230 V/50 Hz	03G7010	03G7000	03G7050	03G7100
Part No. version 115 V/60 Hz	03G7010a	03G7000a	03G7050a	03G7100a
Sample gas outlet dew point	Range of adjustment: 2 to 15 °C [35.6 to 59 °F], factory setting: +5 °C [41 °F]			
Sample gas outlet dew point stability	At const. conditions: < ±0,1 °C [±0.18 °F]			
Sample gas inlet temperature	*Max. 80 °C [176 °F], optional: *max. 180°C [356 °F] with stainless steel bulkhead union			
Sample gas inlet water vapor saturation	*Max. +80 °C [176 °F]			
Heat exchanger gas flow rate	*Max. 150 NI/h	*Max. 150 NI/h	*Max. 150 NI/h per heat exchanger	*Max. 350 NI/h
Ambient temperature	*5 to +40 °C [41 to 104 °F]			
Storage temperature	-25 to +65 °C [-13 to +149 °F]			
Pressure	0.7 bar up to 1.4 bar abs.			
Total cooling power	Max. 110 kJ/h	Max. 110 kJ/h	Max. 180 kJ/h	Max. 110 kJ/h
Number of gas inlets	1			
Number of gas outlets	1, optionally up to 2 max.	1, optionally up to 4 max.		
Medium connections	Tube connections 4/6 mm, material: PVDF			
Material of sample-contacting parts	Stainless steel, glass, PVC, PVDF, PTFE, Novoprene			
Ready for operation	Approx. 3 min.			
Mains power supply	230 V/50 Hz ±10 % or 115 V/60 Hz ±10 %			
Power consumption	Max. 240 VA	Max. 240 VA For option temperature controller and heated sample line with 230 V: 1620 VA max. and with 115 V: 930 VA max.		
Fuse protection	4 A, time-delayed, 5 x 20 mm	4 A, time-delayed, 5 x 20 mm with option temperature controller and heated sample line: 10 A, time-delayed, 5 x 20 mm		
Electrical connection	Terminals 4 mm ²			
Case protection	IP20 EN 60529			
Mounting	Front plate (height: 6 U)	Aluminum mounting plate for wall mounting		
Dimensions (W x H x D)	482 x 266 x 390 mm** [≈ 19" x 10.5" x 15.4"]	515 x 385 x 235 mm [≈ 20.3" x 15.2" x 9.3"]		
Weight without options	Approx. 14.5 kg [≈ 32.0 lbs]	Approx. 12.5 kg [≈ 27.6 lbs]	Approx. 14.8 kg [≈ 32.6 lbs]	Approx. 12.7 kg [≈ 28.0 lbs]
Electrical equipment standard	EN 61010			

* Maximum values in technical data must be rated in consideration of total cooling capacity at 25 °C [77 °F] ambient temperature and an outlet dew point of 5 °C [41 °F].

** Attention: keep 60 mm [≈ 2.4"] distance to the floor under the unit for dismounting the filter glass.


PTFE=Polytetrafluoroethylene (Teflon®), PVDF=Polyvinylidenfluoride

Other versions on request

Options	Type	Part No.
mA output cooler	1 x mA output including plug and socket, mounting and calibration per channel included	01K9200
Liquid alarm sensor LA1S	Liquid alarm detection in the SS5C incl. switch-off function for the sample gas pump, liquid alarm sensor type LA1S with cable break detection, for conductive media, completely wired, evaluation via front display	03G7200
Temperature controller for a max. length of 12 m (230 V) or 6 m (115 V) heated sample line, 100 W/m for Pt100	Range of control: 0 to 200 °C [32 to 392 °F] Input : Pt100, power: 230 V 50/60 Hz (Part No. 01G9055) or 115 V 50/60 Hz (Part No. 01G9055a), contact capacity: 250 V AC max. 10 A, completely mounted incl. 7-pin plug 10 A	01G9055(a)
Flow meter FM40 (optionally), max. 4 pieces	FM40 7-70 NI/h air FM40 15-150 NI/h air FM40 25-250 NI/h air FM40 50-500 NI/h air	01G9070 01G9075 01G9080 01G9085
3-way ball valve*	3L/PV-1 for switching over from test gas to sample gas, in the inlet of the sample gas conditioning unit, mounted with mounting bracket, fittings in PVDF	01G9046
5-way ball valve*	5L/PV-1 for switching over from test gas to sample gas, in the inlet of the sample gas conditioning unit, mounted with mounting bracket, fittings in PVDF	01G9045
Needle valve	Needle valve in the bypass of the sample gas pump type N3/N5/N9 for pressureless control, with PVDF screw connections, mounting bracket and assembly	01G9050

*For versions SS5C, SS5C/2, SS5C/3 only

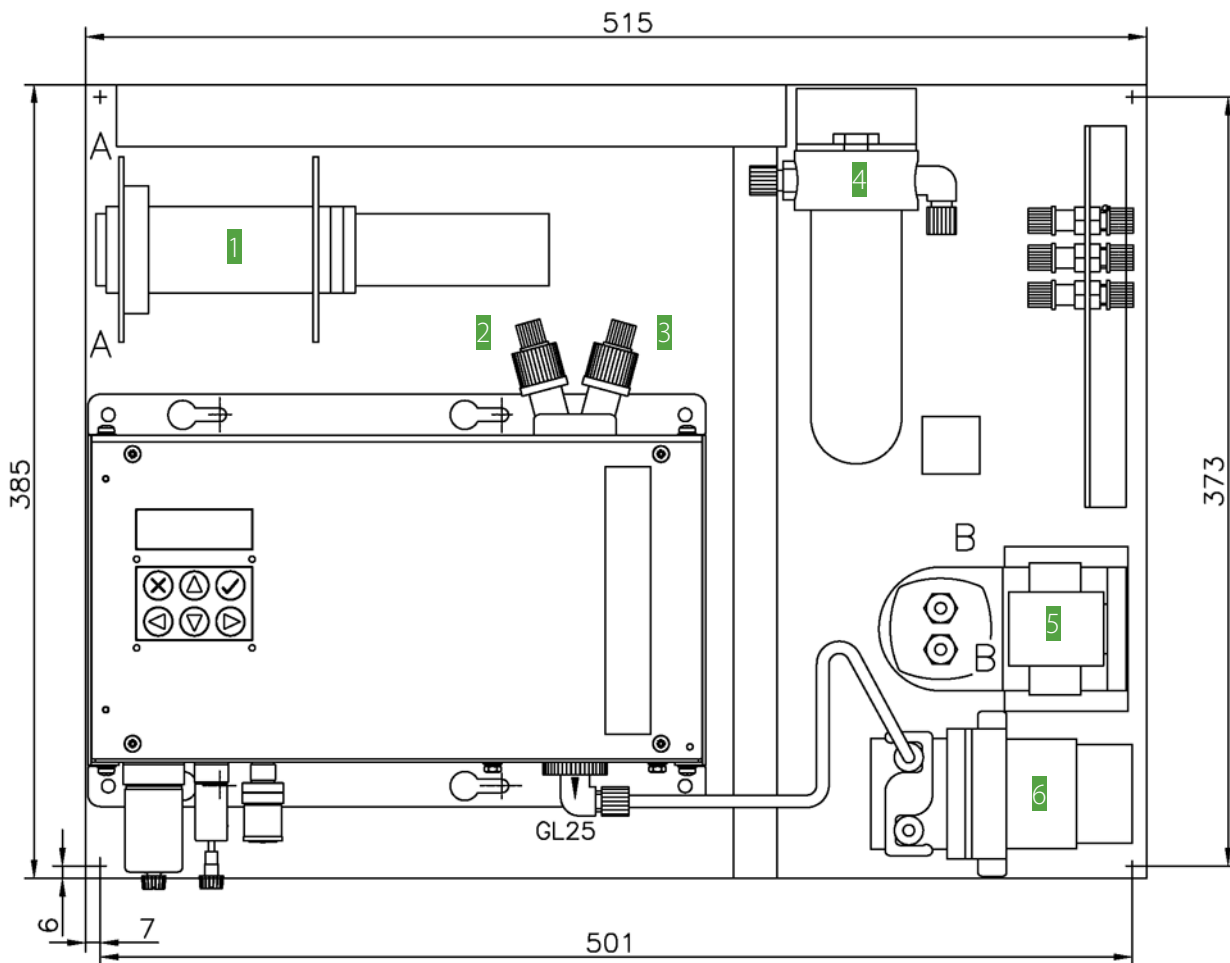10 DESCRIPTION



1 Terminal mounting rail

3 Cooler, sample gas IN


5 Diaphragm sample gas pump

2 Cooler, sample gas OUT

4 Fine filter FP-2T

6 Peristaltic pump SR25.2-W, condensate OUT
(all connections DN 4/6)

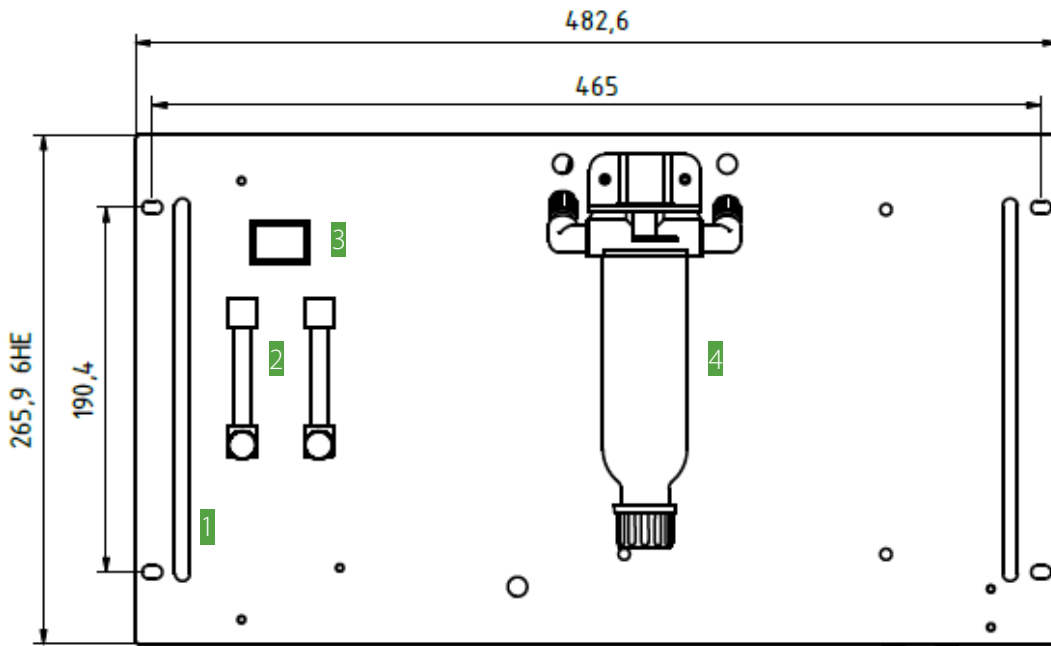Figure 5 Dimensions and design: SS5C and SS5C/3



- 1 Holder
- 2 Flow meter
- 3 Display
- 4 Fine filter FP-2T

Figure 6 Dimensions and design of the SS5C-19" front

Caution

Maintain a distance of 60 mm from the floor under the unit. The distance is the removal dimension for the filter glass.


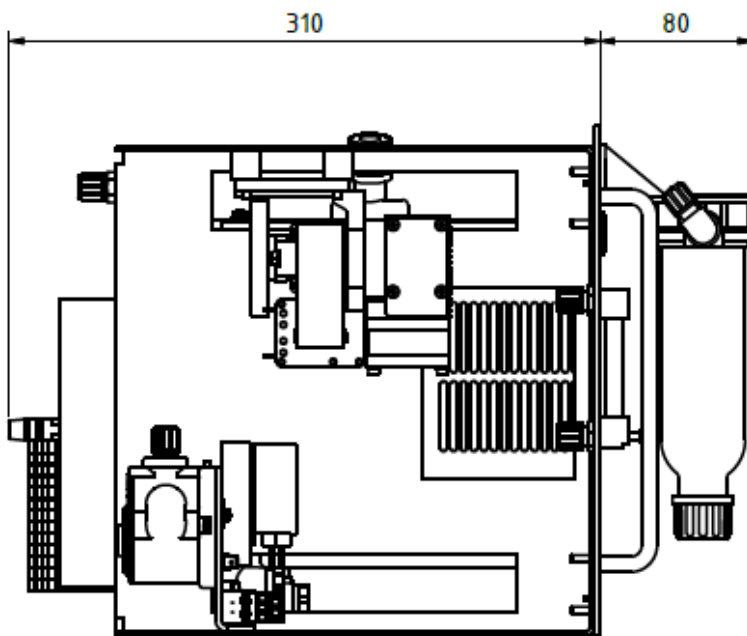


Figure 7 SS5C-19", side view

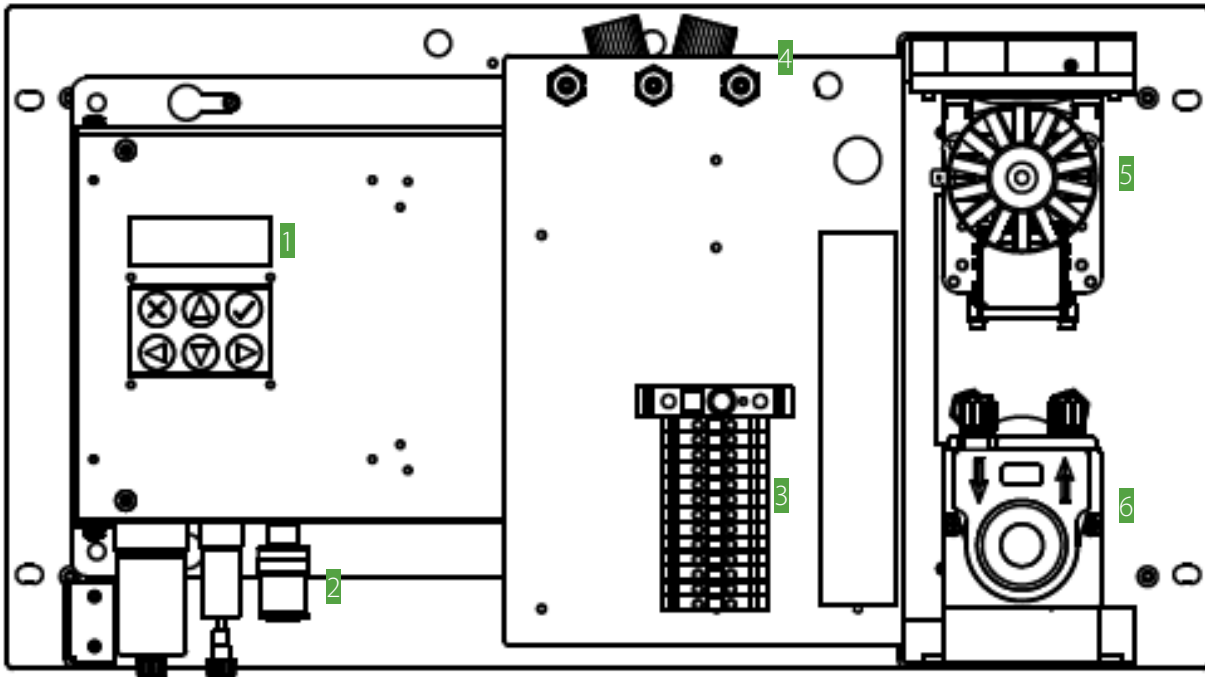

1 Cooler, Display and control panel

3 Terminal mounting rail


5 Diaphragm sample gas pump

2 Cooler, electrical connections

4 Sample gas connections

6 Peristaltik pump SR25.2-W

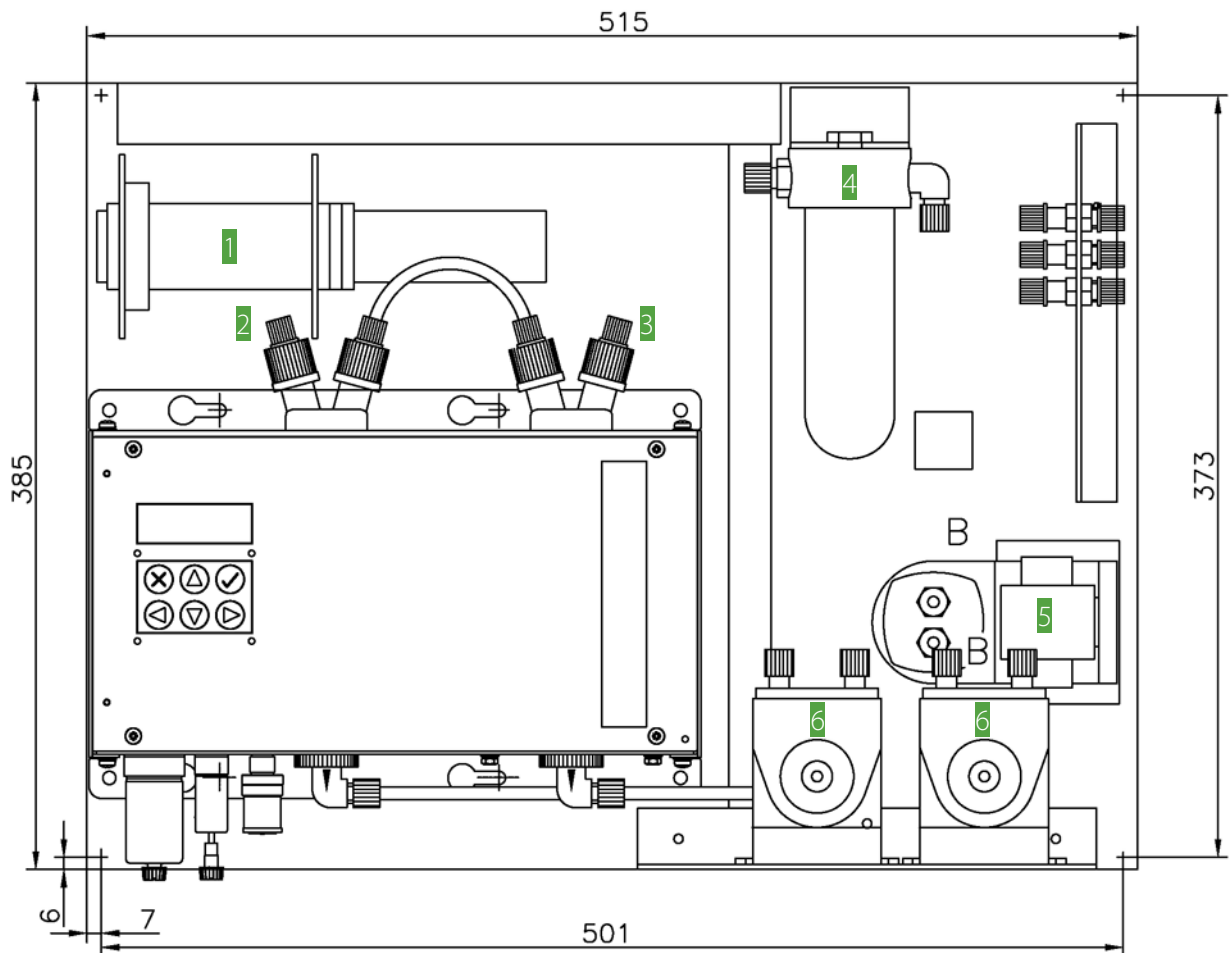Figure 8 SS5C-19", rear view



1 Terminal mounting rail

3 Cooler, sample gas IN

5 Diaphragm sample gas pump

2 Cooler, sample gas OUT

4 Fine filter FP-2T

6 Peristaltic pump SR25.2-W, condensate OUT
(all connections DN 4/6)

Figure 9 Dimensions and design: SS5C/2

All components of the gas conditioning system are mounted on an aluminium plate and are freely accessible.

The gas cooler and an appropriate diaphragm gas pump **5** are installed depending on the required maximum gas flow (for operating instructions for individual components, see Appendix). The possible combinations are summarised in the following table:

	Type of cooler	Max. gas flow [NI/h]	Min. gas flow [NI/h]	Sample gas pump
SS5C, SS5C-19"	ECP1000C	150	60	N 3 KPE
SS5C/2	ECP2000C	150	60	N 3 KPE
SS5C/3	ECP3000C	350	200	N 9 KPE

When controlling the sample gas flow rate at the outlet of the conditioning unit (option "flow meter" or downstream external flow meter), the minimum flow rates (see table) must be observed. If the required minimum total flow rate is not reached, excessive overpressure can lead to premature destruction of the pump diaphragm.

All gas coolers are equipped with a Duran glass heat exchanger. Heat exchangers of PVDF or stainless steel are also available.

The pre-filter **FP-2T** (2 µm filter element porosity) **4** installed upstream of the sample gas pump **5** ensures the necessary separation of solids.

To protect downstream analyzers, the overtemperature alarm contact (+8 °C [46.4 °F]) of the cooler automatically switches the sample gas pump **5** on and off.

The resulting condensate is continuously discharged by a peristaltic pump type **SR25.2-W** **6** (see Appendix for individual part instruction manuals).

The 4/6 mm hose connections (see Figure 5) for the condensate and sample gas lines are located on the right side of the gas conditioner.

There are ventilation grids on the left side of the cooler, to provide sufficient ventilation for the cooler.



Note

The ventilation grids for ventilating the cooler must be freely accessible.

Options

The **SS5C**, **SS5C-19"**, **SS5C/2** and **SS5C/3** sample gas conditioning units can be equipped with a maximum of four sample gas outlets at the factory. Each sample gas outlet can be controlled according to the specified volume flow range by the optional installation of a flow meter type **FM40** with needle valve. Unused mounting holes for sample gas outputs or flow meters are closed by blind caps.

In order to protect the downstream analyzers against liquid ingress and to increase the operational reliability of the entire system, we recommend the installation of a liquid alarm sensor type **LA1S** with cable break detection (Part No. 01G9015). For this purpose, the **FP-2T** fine filter installed as standard is replaced by the **FP-2T-D** fine filter with mounted liquid alarm sensor at the factory. The evaluation electronics for the LA1S liquid sensor are integrated in the ECPX000C cooler as standard.

The temperature controller (Part No.: 01G9055(a)) required to control a heated line is factory mounted on the terminal mounting rail (Figure 5, Figure 9: **1**, Figure 8: **3**) if the desired option is selected.

A 3-way ball valve (01G9046) or a 5-way ball valve (01G9045) can optionally be mounted in the inlet of the gas conditioning unit for test gas feed or sample gas switching.

11 OPERATING INSTRUCTIONS

The display and control panel of the ECPX000C are clearly visible on the front panel of the built-in cooler. The functions described here are excerpts from the operating instructions of the ECPX000C series. For the complete documentation, read the ECPX000C instruction manual. It can be downloaded from the M&C homepage.





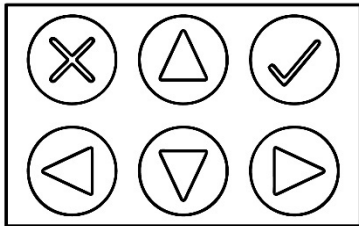
Note

The complete instruction manual of the ECPX000C can be found at www.mc-techgroup.com.

In the main menu, the cooler temperature, the ambient temperature, the set absolute or differential set point and the current set point can be displayed. The set point entry and the menu for parameter setting can be accessed via a PIN entry. PIN entry prevents unintentional adjustment of the set point and the device configuration.



Use the arrow keys to navigate through the menu and enter values. Press the "OK" key  to confirm entries and the "Exit" key  to exit the input area or to reject an entry.



11.1 MAIN MENU

After approx. 3 minutes the device is ready for operation. The current cooler temperature is displayed first. Use the arrow keys to navigate through the main menu. The following figure shows an example of how you can navigate through the main menu.



Figure 10 Navigating through the main menu



Note

Tap on the -key, to go back to the cooling temperature.

The cooling temperature is shown in the display as follows:



The cooler temperature is shown on the display.



The ambient temperature is indicated by a "0" sign on the left side of the displayed temperature.



The set point for absolute value control is indicated by an "A" and the set point for differential control by a small "d" before the temperature value.



The absolute value control temperature can be set between 2 to 15 °C [35.6 to 59 °F]. The differential value control temperature can be set between dT = 2 to 15 °C [dT = 3.6 to 27 °F].



The display of the current signal value is indicated by a capital "P" on the right-hand side. The signal value is a measure for the percentage workload. The signal value can assume values from 0 to 99.



Note


You will find the complete menu structure in the appendix of the ECPX000C instruction manual.



11.2 PIN ENTRY

To enter the range of set point input or parameter setting, a PIN must be entered. The PIN "1234" is factory-set and cannot be changed.

To enter the PIN, proceed as follows:



Press and hold the -key until "0000" appears in the display.


The "0" on the left side is blinking. Use the  and -keys to enter the first digit of the PIN.


Use the  and -keys to switch to the other digits. If a digit is blinking, the PIN digit can be entered.




The PIN "1234" looks like this on the display.





Confirm the PIN with the -key.

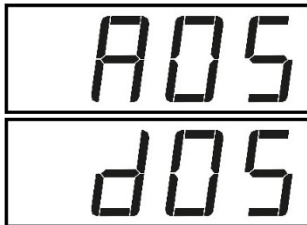
After confirmation, immediately the display for the set point entry is shown. Press and hold the -key longer to access the parameter setting area.



The PIN is valid for 15 minutes. If you exceed this time, the display field reappears with "0000" when you press and hold the -key. The PIN must be entered there again.



11.3 SET POINT ENTRY

If you tap the -key briefly after entering the PIN (see chapter "11.2 PIN entry"), the set point for the cooler temperature appears. This set point can belong to the operating mode "absolute control" ("A") or "differential control" ("d").

The two digits start blinking. The absolute value control temperature can be set from 2 to 15 °C [35.6 to 59 °F] using the  and -keys. The differential value control temperature can be set from dT = 2 to 15 °C [dT = 3.6 to 27 °F] using the  and -keys. The factory setting is absolute value control temperature of 5 °C [41 °C].





Use the  and -keys to switch between the operating mode and set point settings.

If the letter on the left side is blinking, you can use the  and -keys to switch between absolute and differential value control of the set point temperature.



Note

Tap the -key, then the entries are discarded, and you return to the cooler temperature.

As long as the PIN is active (see chapter "11.2 PIN entry"), the set point entry can also be accessed from the main menu. To change a set point, press the -key for 2 seconds during the current temperature or set point display. The display then changes to set point input. The two digits start blinking. Values can be set here. The following figure shows, using the example of an ECP1000C/ECP3000C, how to access the set point input from the main menu.

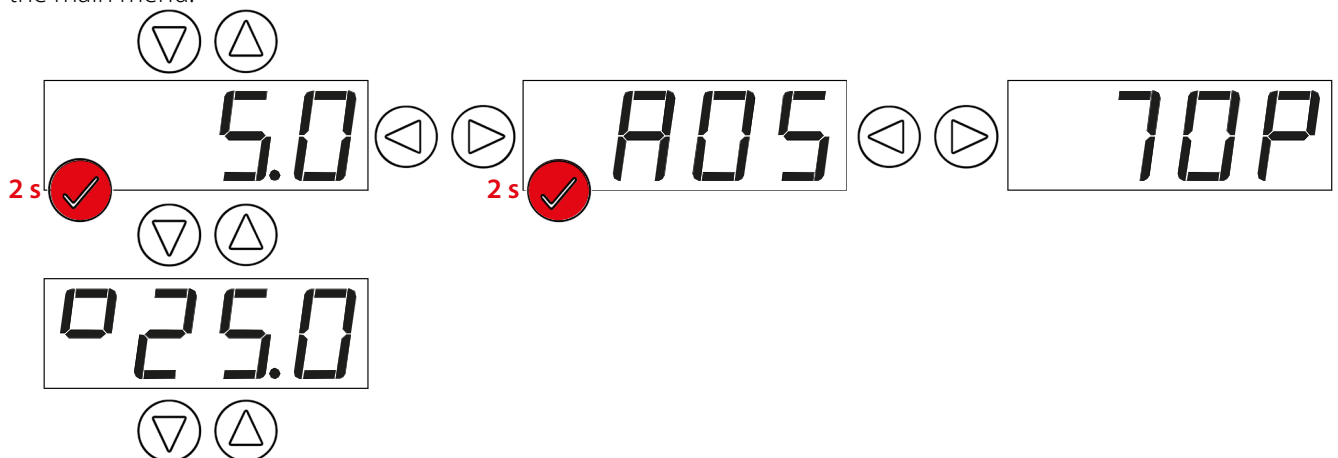




Figure 11 Reaching the set point entry from the ECP1000C/ECP3000C main menu

12 PARAMETER SETTING

If you tap the -key after entering the PIN (see chapter "11.2 PIN entry"), the set point for the cooler temperature appears first. If the -key is pressed and held for a short moment, the display changes to code entry. Here you can enter the codes that belong to the respective parameter settings.

You can also access the parameter setting from the main menu. To do this, keep the -key pressed until the code entry is displayed. The PIN must be active in this case.







Note


The codes for parameter settings can be found in the appendix of this instruction manual.



To adjust the device parameters, the code belonging to the parameter must be entered and confirmed in this display. The left digit of the code entry is blinking. The first digit can be entered here.

Use the  und -keys to switch between the digits and the  and -keys to set the individual digits.

A code can have up to 3 digits. Single-digit codes are device-specific, two-digit codes are important basic settings (tens digit corresponds to the channel number), three-digit codes are used for calibration (hundreds digit: "2" stands for LA, "3" for mA calibration).

The PIN is valid for 15 minutes. If you exceed this time, the display field reappears with "0000" when you press and hold the -key. The PIN must be entered there again (see chapter "11.2 PIN entry").

If you enter an invalid code and press the -key, the display returns to the cooler temperature.

12.1 SETTING TEMPERATURE ALARM LIMITS

You use the temperature alarm limits to determine when the alarm is triggered. HIGH dT and LOW dT are independently adjustable from $dT = 2$ to $8\text{ }^{\circ}\text{C}$ [$dT = 3.6$ to $14.4\text{ }^{\circ}\text{F}$]. In the following figure, the upper temperature alarm limit is set at $8\text{ }^{\circ}\text{C}$ [$46.4\text{ }^{\circ}\text{F}$] and the lower one at $3\text{ }^{\circ}\text{C}$ [$37.4\text{ }^{\circ}\text{F}$].

The hysteresis is set to "1".







Figure 12 Temperature alarm limits and hysteresis



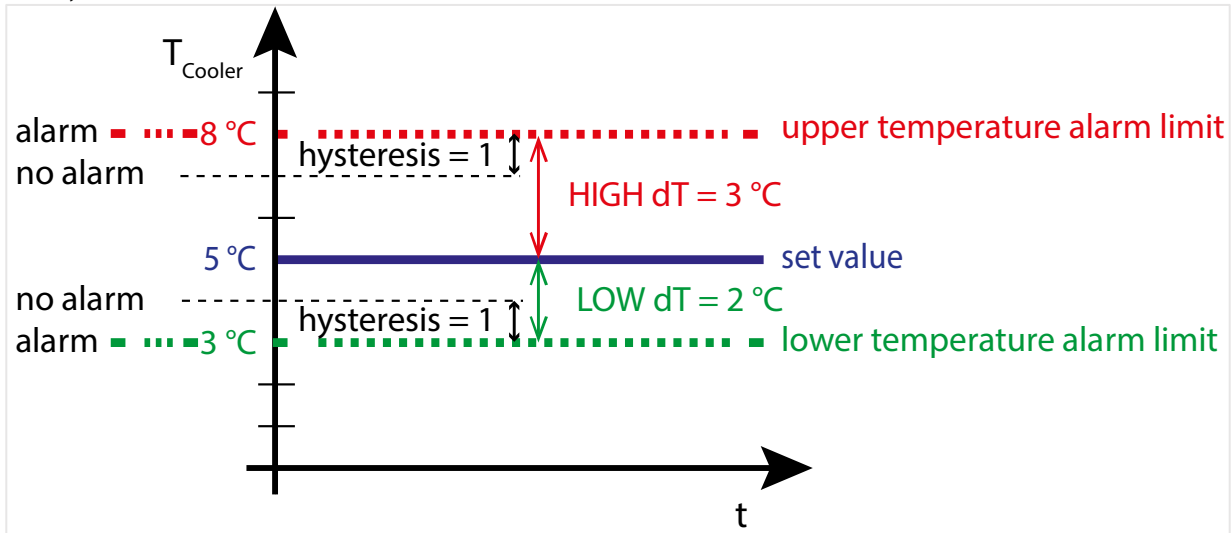To set the temperature limits:



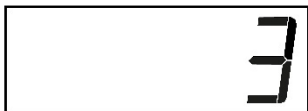1. Enter the PIN (see chapter "11.2 PIN entry").
2. Tap and hold the -key for a short moment.
3. The display shows the code entry.



The code for setting HIGH dT of the channel is "012". Confirm the code with the -key, then the display of the pre-set value appears.



After confirming the code, the default value "3" appears. The value is blinking and you can enter values from $dT = 2$ to $8\text{ }^{\circ}\text{C}$ [$dT = 3.6$ to $14.4\text{ }^{\circ}\text{F}$] with the  and -keys.

Press  to confirm your change or  to leave the code range without making any changes. After changing or aborting the display shows the cooler temperature again.

The code for setting LOW dT is "013". If you enter this code, you can change the lower temperature alarm limit.

The hysteresis setting can be changed via code "014". The hysteresis ensures that no "fluttering" occurs in the event of a temperature alarm. The differential value $dT = 1$ or $2\text{ }^{\circ}\text{C}$ [1.8 or $3.6\text{ }^{\circ}\text{F}$] can be entered.




Note

If HIGH dT or LOW dT is reduced to "2", the hysteresis is automatically reduced to the differential value $dT = 1\text{ }^{\circ}\text{C}$ [$1.8\text{ }^{\circ}\text{F}$].

12.2 FAN SPEED SETTING

The ECPX000C is equipped with a large cooling fin block which is forced-ventilated by a fan. The minimum speed of the fan can be changed without affecting the final performance of the cooler.

To change the fan speed setting:


1. Enter the PIN (see chapter "11.2 PIN entry").
2. Tap and hold the -key for a short moment.
3. The display shows the code entry.
4. The code for setting the fan speed is "084". The setting range is between 0 and 5. At level 0 the fan rotates slower and is quieter. At higher values, the fan rotates faster and the air flow rate is increased.


Level 2 is set by default This fan speed is necessary to reduce the temperature increase inside the case.

12.3 BRIGHTNESS SETTING OF DISPLAY

It may be necessary to change the brightness of the display due to different lighting conditions at the locations where the cooler is used. The brightness of the display can be adjusted on the control panel of the ECPX000C.

To change the brightness setting:

1. Enter the PIN (see chapter "11.2 PIN entry").
2. Tap and hold the -key for a short moment.
3. The display shows the code entry.



You can also enter the code from the main menu. To do this, keep the -key pressed until the code entry is displayed. The PIN must be active in this case.





Enter the code "005" and confirm the code with the -key.



Now the default brightness value appears. The factory setting is "5".

This value is blinking and can be set between "0" and "9" with the  and -keys. The brightness of the digits changes immediately. The lower the value, the darker the display.

Select the desired brightness value and confirm the selection with the -key or cancel the procedure with the key. Use the -key to leave the range of codes without making any changes.


After changing the brightness or canceling, the display shows the cooler temperature again.

13 OPTION: MA OUTPUT FOR THE TEMPERATURE MEASUREMENT INSIDE THE COOLING BLOCK


The mA outputs built-in by M&C are factory calibrated and set to the range "4-20 mA". Later purchased mA outputs must be calibrated.

13.1 MA OUTPUT RANGE SELECTION



The optional mA output can be changed from 4-20 mA to 0-20 mA. To select the mA range, proceed as follows:

1. Enter the PIN (see chapter "11.2 PIN entry").
2. Tap and hold the -key for a short moment.
3. The display shows the code entry.





Enter the code "015". Confirm the code with the -key, then the display of the preset range appears.



The default value "4-20", which stands for 4 to 20 mA, appears on the display. The whole display is blinking here. Use the  and -keys to switch between "4-20" and "0-20".



Press  to confirm your change or  to leave the code range without making any changes. After changing or aborting the display shows the cooler temperature again.

13.2 MA OUTPUT CALIBRATION FOR THE TEMPERATURE MEASUREMENT INSIDE THE COOLING BLOCK

The mA output built-in by M&C are factory calibrated. If required, the basic accuracy of the mA output can be optimized by recalibration.

A later installed mA output must be calibrated. The mA output is suitable for a maximum load of 500 Ω only. During calibration, first the lower and then the upper value of the mA output will be calibrated.



Note

If the mA output is ordered when ordering the instrument, the mA output is calibrated at the factory. If a mA output is purchased by the customer and retrofitted by the customer, the calibration must be carried out by the customer.

Optionally, the device can be sent to M&C for retrofitting.

The mA output is set to 4 - 20 mA as standard but can be changed to 0 - 20 mA on the instrument. In both cases the mA range corresponds to the temperature range -10 °C to +50 °C [14 to 122 °F].


Current limitation:

The current output limits in the case of 4 - 20 mA in the lower range to 3.8 mA and in the upper range to 20.5 mA. In the case of 0 - 20 mA, it limits the upper range to 20.5 mA.


**Note**

If a calibration error occurs and the mA output has been calibrated, the limiting values also change!


To calibrate an mA output, proceed as follows:

1. Enter the PIN (see chapter "11.2 PIN entry").
2. Tap and hold the -key for a short moment.
3. The display shows the code entry.



Enter the code "310" for the calibration of the lower value of the mA output. Now connect a current meter to the connector of the mA output. This current meter should measure a value close to 1 mA. You can now adjust this value in 0.0054 mA steps with the up and down arrow keys. After the adjustment, the current meter should display 1 mA as accurately as possible. Accept the value with the -key.



Enter the code "C311" for the calibration of the upper value of the mA output. Now connect a current meter to the connector of the mA output. This current meter should be used to measure a value close to 20 mA. You can now adjust this value in 0.0054 mA steps with the up and down arrow keys until the current meter displays 20 mA as accurately as possible. Accept the value with the -key.

The cooler should then be in a steady state at 5 °C [41 °F] (absolute value control) and provide one of the following values:

- 8 mA (in case of 4 - 20 mA)
- 5 mA (in case of 0 - 20 mA)

The cable length is not limited, and the cable does not need to be shielded.


14 OPTION: LIQUID ALARM SENSOR (LA) TYPE LA1S

M&C installs the liquid alarm sensors type LA1S with cable break detection. They are factory calibrated to tap water and activated with cable break detection. Later purchased liquid alarm sensors must be activated and calibrated.

14.1 ACTIVATING THE LA

A retrofit liquid alarm sensor LA1S must be activated. The LA1S can be activated with or without cable break detection.

To activate a liquid alarm sensor:

1. Enter the PIN (see chapter "11.2 PIN entry").
2. Tap and hold the -key for a short moment.
3. The display shows the code entry.



The code for activation is "010".

Confirm the code with the -key.



You can choose between the values "0", "1" and "2". With "1" you activate the sensor without cable break detection, with "2" you activate the sensor with cable break detection. With "0" the sensor is deactivated accordingly.

After activating the LA1S, the sensor needs to be calibrated.

14.2 LA SENSITIVITY ADJUSTMENT

The sensitivity can be changed by following these steps:

1. Enter the PIN (see chapter "11.2 PIN entry").
2. Tap and hold the -key for a short moment.
3. The display shows the code entry.



Enter the code "011" to change the sensitivity of the liquid sensor.

The default value is 2 and can be changed from 1 to 7. The sensitivity corresponds to the switching threshold for the alarm and is to be understood as follows:

Sensor state	Sensitivity	Electrical conductivity
Dry	0 %	
7	30 %	≈ 50 μS/cm
6	40 %	
5	50 %	
4	60 %	
3	70 %	
2	80 % (Standard)	≈ 300 μS/cm
1	90 %	
Wet	100 %	

The cancellation limit is always 15 % below the sensitivity limit. If the sensitivity value of 2 is not changed, the alarm is triggered at 80 % and is automatically cancelled as soon as it falls below 65 %.

The following diagram illustrates the correlations:

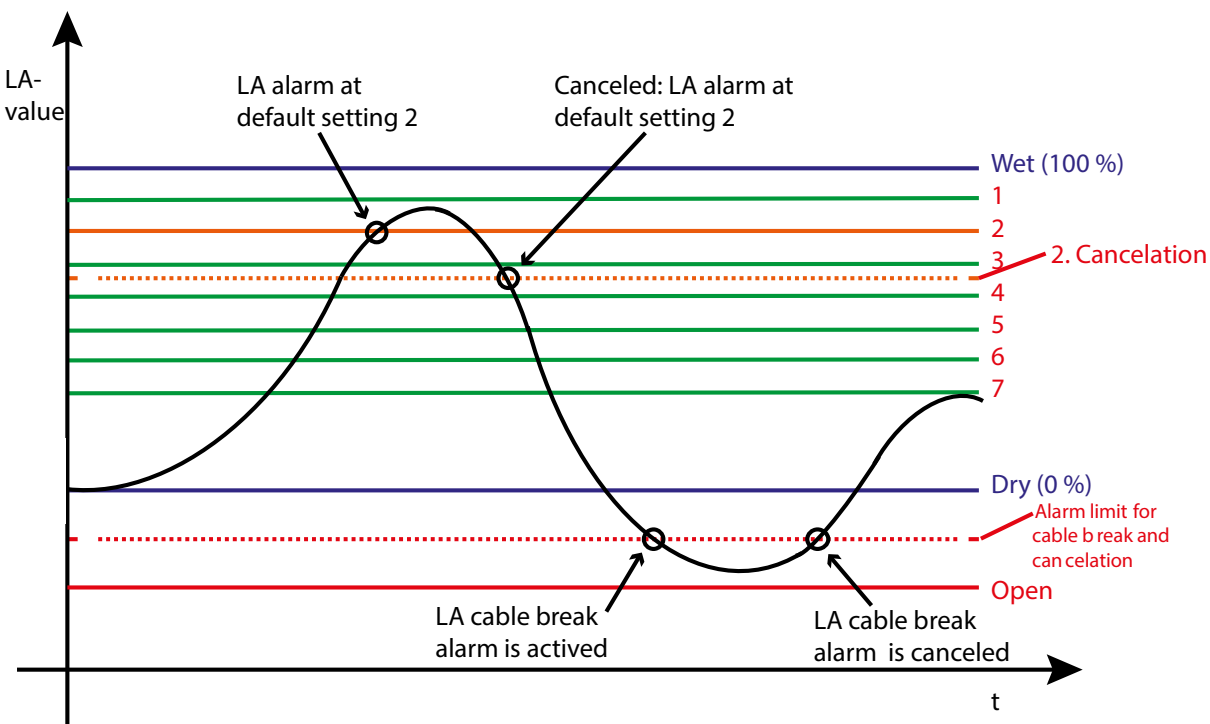


Figure 13 LA alarm limits

14.3 LA CALIBRATION


The liquid alarm sensors LA1S with cable break detection installed by M&C are factory activated and calibrated. If required, the basic accuracy of the liquid alarm sensors can be optimized by recalibration. Later-installed liquid sensors must be activated and calibrated.



Note


Make sure that the LA is activated. If a retrofitted LA1S is not activated, the calibration has no effect and will be discarded.

To calibrate a liquid alarm sensor, proceed as follows:

1. Enter the PIN (see chapter "11.2 PIN entry").
2. Tap and hold the -key for a short moment.
3. The display shows the code entry.




First calibrate the "dry state" of the liquid alarm sensor.

To do this, leave the LA in the dry state and enter the code "210". Confirm the displayed value with the -key.



Then calibrate the "wet state" of the liquid alarm sensor.

Immerse the LA in the process-dependent condensate to calibrate the 100 % wet condition via code "211". Confirm the displayed value with the -key.

15 RECEIPT OF GOODS AND STORAGE

The stationary gas conditioning units **SS5C**, **SS5C-19"**, **SS5C/2** and **SS5C/3** are completely pre-installed units. An instruction manual is enclosed with the gas conditioning unit.

- Immediately after arrival take the gas conditioning system and possible special accessories carefully out of the packaging material.
- Compare the goods with the items listed on the delivery note.
- Check the goods for any damage caused during delivery and, if necessary, notify your transport insurance company without delay of any damage discovered.



Note

The equipment should be stored in a protected, frost-free room!

16 INSTALLATION INSTRUCTIONS



Note

The equipment is to be used in a vertical position only. The perfect functioning of the separation and drainage procedures will only be guaranteed if the equipment is used in a vertical position.

The gas conditioning system should be installed in an area well away from any heat emitting sources in order to prevent damage caused by an accumulation of heat.

Ensure that the preparation unit is installed on site in accordance with personal safety regulations.

The compact gas conditioning system is preferably designed for mounting inside a cabinet. When the cabinet is installed outside, ample protection against the effects of direct sunlight and dampness must be provided. In winter, the equipment must only be used in frost-free areas; The protection class of the gas conditioning unit must be observed.

The supplied distance bolts (M5, 15 mm) have to be used for mounting.

In order to ensure the operational safety of the stationary gas conditioning unit and the downstream analyzers and to avoid false alarms, the sample gas conditioning system must not be used outside the specified temperature range.

Downstream analyzers must always be operated at temperatures well above the specified gas output dew point of +5°C [41 °F]. The temperature of the sample gas must not exceed the specified temperature range. This avoids subsequent condensation of the gas in the connecting lines to the analyzers.

Unheated gas sample lines must be routed with a downward gradient to the cooler. Condensate pre-separation is then not necessary.

16.1 OPTION: LIQUID ALARM SENSOR WITH SWITCH-OFF FUNCTION FOR SAMPLE GAS PUMP



Note

Check the sensitivity setting of the LA15 to ensure that it is suitable for the condensate used. Check if the liquid alarm sensor triggers reliably.

A sensitivity of 80 % and an electrical conductivity of approx. 300 $\mu\text{S}/\text{cm}$ are set at the factory.

For adjusting the LA sensitivity, see chapter 14.2.

17 HOSE CONNECTIONS



Note

**Do not switch tube connections; connections are marked accordingly.
After all lines have been connected, the tightness must be checked.**

All tube connections are equipped with 4/6 mm clamping ring tube fittings made of polyvinylidenfluoride (PVDF) for gas inlet temperatures of up to a maximum of 80 °C [176 °F] (see chapter "9 Technical data"). When heated sample lines are used, the gas inlet temperatures can increase up to a maximum of 180 °C [356 °F]. In this case, the use of optional stainless steel bulkhead fittings is recommended.

Connecting tubes of dimension 4/6 mm are used as standard.

Install the sample gas tubes and the condensate tube as follows:

1. Remove the union nut from the clamping ring tube fittings by turning it anti-clockwise. The nut should be removed from the thread with great care so as to ensure that the loose sealing ring in the nut is not lost.
2. Place the union nut over the connecting tube.
3. Place the sealing ring over the connecting tube with the thicker bead towards the nut.
4. Place the tube over the nipple on the thread.



Note

The tightness of the connections can only be guaranteed if the connecting hose has a straight rim (hose cutter).

5. The union nut is to be screwed tight by hand.

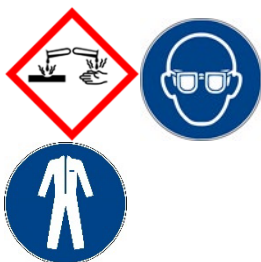
The hose will no longer be able to slip off and is now compression-proof.

The hoses are to be removed in the reverse order.



Warning

Aggressive condensate possible.



Wear protective glasses and proper protective clothing!

18 ELECTRICAL CONNECTIONS



Warning

Wrong supply voltage can damage the equipment. When connecting the equipment, make sure that the supply voltage is identical with the information provided on the model type plate!



Note

For the erection of power installations with rated voltages up to 1000V, the requirements of VDE 0100 and relevant standards and specifications must be observed!

The main circuit is equipped with a fuse corresponding to the nominal current (over current protection); for electrical details see technical data.

Use an external switch to disconnect the gas conditioning unit from the power supply. An external switch suitable for the switching-on location must be provided by the customer.

The **SS5C**, **SS5C-19"**, **SS5C/2** and **SS5C/3** gas conditioning systems are available with either 230 V/50 Hz or with 115 V/60 Hz (for circuit diagram see Appendix). The device is protected by a 4 A fuse as standard. The fuse is located on the terminal mounting rail (see Figure 5, Figure 9: **1**, Figure 8: **3**).

If a temperature controller with heated gas sample line is used as an option, the fuse protection increases to 10 A.

The mains cable for the electrical connection is connected to the terminal positions 1, 2 and 3 of the terminal mounting rail (see Figure 5, Figure 9: **1**, Figure 8: **3**).

Casing/PE	1	PE	power in PE
X1/4	2	Si	power in L
X1/11	3		power in N
X1/2	4		E1Netz/1L
M3/L 230V	5		M2/L 230V
B2/L1	6		X2/4
B2/5	7		E1Status/1
E1Status/2	8		M1/black
	9		M1/blue
	10		M1/orange
X1/3	11		M1/white
	12		E1Netz/2N
M3/N 230V	13		M2/N 230V
B2/N	14		X2/2
M3/PE	15	PE	E1/X1-3
X2/PE	16	PE	M2/PE
	17	PE	M1/PE

SS5C, SS5C/2, SS5C/3

Casing/PE	1	PE	power in PE
X1/4	2	Si	power in L
X1/11	3		power in N
X1/2	4		E1Netz/1L
H1	5		M2/L 230V
	6		
	7		E1Status/1
E1Status/2	8		M1/black
	9		M1/blue
	10		M1/orange
X1/3	11		M1/white
H1	12		E1Netz/2N
	13		M2/N 230V
	14		
	15	PE	E1/X1-3
	16	PE	M2/PE
	17	PE	M1/PE

SS5C-19"

Figure 14 Electrical connections for 230 V

Casing/PE	1	PE	power in PE
X1/4	2	Si	power in L
X1/11	3		power in N
X1/2	4		E1Netz/1L
M3/L 115V	5		M2/L 115V
B2/L1	6		X2/4
B2/5	7		E1Status/1
E1Status/2	8		M1/black
	9		M1/blue
	10		M1/orange
X1/3	11		M1/white
	12		E1Netz/2N
M3/N 115V	13		M2/N 115V
B2/N	14		X2/2
M3/PE	15	PE	E1Netz/3PE
X2/PE	16	PE	M2/PE
	17	PE	M1/PE

SS5C, SS5C/2, SS5C/3

Casing/PE	1	PE	power in PE
X1/4	2	Si	power in L
X1/11	3		power in N
X1/2	4		E1Netz/1L
H1	5		M2/L 115V
	6		
	7		E1Status/1
E1Status/2	8		M1/black
	9		M1/blue
	10		M1/orange
X1/3	11		M1/white
H1	12		E1Netz/2N
	13		M2/N 115V
	14		
	15	PE	E1Netz/3PE
	16	PE	M2/PE
	17	PE	M1/PE

SS5C-19"

Figure 15 Electrical connections for 115 V

Option "temperature controller for heated sample lines":

For the electrical supply and control of a heated sample line with PT-100 or a thermo element a 7-pin plug at the side of the unit is available. The connection power is max. 6 A, 1380 W for the 230 V version or 6 A, 690 W for the 115 V-version.

The maximum length of the heated sample line which can be used is calculated as follows:

$$L \text{ [m]} = \frac{\text{Max. connection power [W]}}{\text{Power consumption of heated sample line [W/m]}}$$

Option "heated sample line":

For the electrical supply of a heated line with Pt100 sensor a 7-pin connector is available.

For the electrical supply of other heated components (e.g., heated sample gas probe or heated filter) a 4-pole round plug connector is available at the heated lines Part No 01B4050 or 01B4040. The maximum connected load is 6 A, 1380 W for the 230 V sample gas conditioning unit and 6 A, 690 W for the 115 V version.

The maximum length of a possible heated sample line is calculated as follows:

$$L \text{ [m]} = \frac{\text{Max. connection power [W]} - \text{Power consumption of heated components (i.e. sample probe) [W]}}{\text{Power consumption of heated sample line [W/m]}}$$

Option "analogue output of the sample gas cooler temperature, Part No 01G9010":

The connection of the mA signal output is a 4-pole circular connector (female).

The mA output signal is available at pin 1 + and 3 -.

Measuring range: -10 to 50 °C [14 to 122 °F], mA output 4 to 20 mA or 0 to 20 mA, factory setting 4-20 mA. To select the mA output range and to calibrate the mA output see chapter 13.1 and 13.2.

The load is 500 Ohm.

19 PREPARATIONS FOR COMMISSIONING

Before initial startup, all plant- and process-specific safety measures must be observed. It is mandatory for the operator to complete the enclosed risk assessment of the product.

The gas exposure risk must be assessed by the operator with regard to the hazards posed by process and calibration gas and the setup at the installation site (e.g. tubing, system cabinet/container/plant). If the risk assessment reveals increased exposure hazards, further measures are required.

A visible label must be attached to the installation site in accordance with the risk assessment provided by the operator.

20 COMMISSIONING

Observe the facility and process-specific safety measures before commissioning.

Carry out the following steps before initial commissioning:

1. Connect the cable to the terminal mounting rail.
2. Connect the heated sample line (optionally).



Warning

Check the temperature at the temperature controller when operating the sample gas conditioning unit with a heated sample gas line



3. Set the desired temperature on the temperature controller.

Type 701 (effective from: September 2020, Serial No. 2009143):

After switching on, the display of the controller shows the actual value and the setpoint of the heated line.

On delivery, the set point is set to 0 °C [32 °F].

To change the set point, press one of the arrow keys to adjust the desired set point.



Note

The complete instruction manual of the temperature controller 701 is available at www.mc-techgroup.com.

The gas cooler is ready for operation after approximately 3 minutes. If a heated line is connected, the time in which the gas conditioning unit is ready for operation increases to approx. 1 hour.

The over temperature alarm contact of the cooler switches the sample gas pump automatically on as soon as the temperature reaches +8 °C [46.4 °F].



Note

The following minimum gas flow rates result from the requirement of the maximum pressure-side load of the sample gas pumps N3 KPE, N5 KPE and N9-KPE of 1.4 bar abs.:

N3 KPE approximately 60 NI/h air.

N5 KPE approximately 100 NI/h air.

N9 KPE approximately 200 NI/h air.

Premature damage can be caused to the pump membrane if less than the minimal total amount of flow is extracted as a result of over pressure.

For long-term measurements with a high dust content in the sample gas, a suitable gas sampling probe must be provided to protect the sample line from being clogged.

21 CLOSING DOWN



Note

The area where the gas conditioning unit is placed must remain frost-free even when the unit is switched off.

No special measures are to be taken in the event of short-term shutdowns of the gas conditioning unit.

In the case of long-term shutdowns, for example after a completed series of measurements, it is recommended to purge the gas conditioning unit with fresh air or inert gas. A flushing time of 3 to 5 minutes is sufficient under normal conditions. Condensate residues must also be removed from the system.



Warning

Aggressive condensate is possible.



Wear protective glasses and proper protective clothing!



22 MAINTENANCE

Observe the facility- and process-specific safety measures before carrying out maintenance work!



Warning



Dangerous voltage!

It is necessary to take the equipment off the mains before any assembly, maintenance or repair work is carried out.

The frequency of the maintenance work depends on the operational process and can therefore only be determined in each individual case. Maintenance instructions of the individual components can be found in the instruction manuals for individual components.


All parts to be maintained are easily accessible and installed on the aluminium mounting plate of the sample gas conditioning unit. These are (see Figure 5):

- The filter element of the pre-filter **FP-2T**  (Figure 5, Figure 6, Figure 9).



Note

In order to protect downstream analyzers, the wet filter element must always be replaced in the event of a condensate breakthrough.

- Check the tube of the **SR25.2-W**  (Figure 5, Figure 8, Figure 9) condensate pump every six months and replace if necessary.



Note

The complete instruction manual of the SR25.2-W is available at www.mc-techgroup.com.

- Check the diaphragm of the sample gas pump **N3KPE** (N5 KPE or N9 KPE optionally)  (Figure 5, Figure 8, Figure 9) every six months and replace if necessary;



Note

The complete instruction manual of N3 KPE, N5 KPE and N9 KPE is available at www.mc-techgroup.com.

23 Alarm and Error Messages

The cooler of the sampling system has several monitoring functions. If an alarm limit is exceeded or not reached or if an error occurs during operation, the corresponding messages are shown on the display. These messages are displayed cyclically and alternate with the current cooler temperatures.

If several alarm or error messages occur simultaneously, the messages are shown on the display one after the other.

The alarm and error messages are listed here:

Display	Description	Action	Clear the alarm/error message
A1	The temperature of stage 1 has exceeded the outer limit of the alarm band	Relay 1 opens. Sample gas pump OUT	The temperature of stage 1 exceeds the inner limit of the alarm band
A2*	The temperature of stage 2 has exceeded the outer limit of the alarm band	Relay 2 opens. Sample gas pump OUT	The temperature of stage 2 exceeds the inner limit of the alarm band
LA1	The liquid alarm sensor LA1 has registered a level of humidity corresponding to the set sensitivity	Relay 1 opens. Sample gas pump OUT	The LA1 must register a dry state 15 % below the trip limit.
E1	The temperature sensor 1 cannot be queried or does not pass the plausibility check several times	Relay 1 opens, Control of the Peltier element is switched off. Sample gas pump OUT	The measured values can be read again (e.g. after cable examination or sensor replacement)
E2*	The temperature sensor 2 cannot be queried or does not pass the plausibility check several times	Relay 2 opens, Control of the Peltier element is switched off. Sample gas pump OUT	The measured values can be read again (e.g. after cable examination or sensor replacement)
E3	The temperature sensor 3 cannot be queried or does not pass the plausibility check several times	No effect with absolute value control. With dT control, the corresponding relay opens, and the stage is switched off. Sample gas pump OUT	The measured values can be read again (e.g. after cable examination or sensor replacement)
E4	No voltage flanks resulting from a fan rotation are measured	Stage 1 and stage 2 switch off and both relays drop out. Sample gas pump OUT	The fan supplies voltage flanks again (e.g. after cable examination or fan replacement)
E5	The temperature of cooling stage 1 exceeds a maximum value of 60 °C [140 °F]	Relay 1 opens, Control of the Peltier element is switched off	Device restart after cooling down

*This error can only occur when using gas conditioning unit SS5C/2.

24 TROUBLE SHOOTING

The following table aims to point out possible operational problems and offer solutions to such problems (not applicable during the starting procedure).

Problem	Display	Possible Causes	Check/Solution
Gas flow interruption	No display	No voltage	Check supply voltage with model type plate; OK? Check if mains voltage is applied to X1/2 and X1/3 ; OK? Check the fine fuse on the terminal mounting rail; OK?
	Error code: E5	Cooler does not work; Cooler alarm detects 'over temperature'. Cooler turns sample gas pump off automatically.	Ambient temperature too high. OK? Free convection in optional cabinet impaired ⇒ cabinet temperature too high; OK? Cooler error (see instruction manual ECPX000C); OK?
Cooler works, but gas flow is interrupted	Current cooler temperature(s)	Diaphragm pump does not work	Check voltage on terminals X1/8 and X1/11 ; OK?
		Contaminated diaphragm pump	Remove the tubes at the pump head and check; OK? Clean pump if necessary; OK?
		Sample probe/line clogged up or sample line squashed	Remove sample line at gas inlet; Gas flow? Clean contaminated sample line or replace; No gas flow?
		Sample line to analyzer clogged up or squashed	Disconnect the outlet tube on the analyzer side and check whether sample gas flows at the tube fitting; No gas flow? Clean contaminated lines or replace; Gas flows?
	Liquid alarm on display: LA1	<u>Optional liquid alarm sensor</u> : Sensor turns measuring pump off automatically;	Momentary overloading of the cooler due to excessive amount of condensate; OK? Check tubes for condensate removal; OK? Check tubes of the peristaltic pump (see manual peristaltic pump SR25.2-W); OK? Check peristaltic pump SR25.2-W (see manual peristaltic pump SR25.2-W); OK? Check ECPX000C cooler instruction manual;
	Current cooler temperature(s)	<u>Optional flowmeter(s)</u> : Needle valve closed.	Adjust needle valve(s) to the desired flow



Problem	Display	Possible causes	Check/Solution
Cooler and sample gas pump are running; Condensate in the sample gas line	Current cooler temperature(s)	Pump tube defect	Replace pump tube (see manual peristaltic pump SR25.2-W); ok?
		Peristaltic pump SR25.2-W does not work	Check peristaltic pump (see manual peristaltic pump SR25.2-W); ok?
		Insufficient drying of sample gas	Check ECPX000C (see ECPX000C cooler instruction manual);
		Sensor has not turned off pump.	Check the LA sensor function

25 PROPER DISPOSAL OF THE DEVICE

At the end of the service life of our products, it is important to take care of the appropriate disposal of obsolete electrical and non-electrical devices. To help protect our environment, follow the rules and regulations of your country regarding recycling and waste management.

26 SPARE PARTS LIST

Wear, tear and replacement part requirements depend on specific operating conditions. The recommended quantities are based on experience and are not binding.

For spare parts of components which are not presented in the following list please see the specific instruction manuals or leaflets added in the appendix.

Sampling System Versions SS5C, SS5C-19", SS5C/2 and SS5C/3					
(C) consumable parts, (R) recommended spare parts, (S) spare parts					
			Recommended quantity during operation [years]		
		C/R/S	1	2	3
Fine filter FP-2T: 4 (see Figure 5, Figure 6, Figure 9)					
90F0002	Filter element F-2T , PTFE, 2 µm	C	6	12	20
90F0040	Viton O-ring, 26 for FP-	R	1	1	1
90F0056	Filter holder type F-P for in-depth filter elements, material: PVDF	S	-	-	1
90F0012	Filter body F-120G of glass	R	1	1	1
Fine filter FP-2T with Option LA1S:					
90F0015	Filter body F-120G-D of glass with GL 25 condensate connection thread	R	1	1	1
90F0020	Union nut GL 25	R	1	1	1
90F0025	PTFE sealing ring GL 25-12 mm Ø	R	1	1	1
Peristaltic pump SR25.1:					
90P1007	SR25 pump hose with PVDF tube connectors DN 4/6 mm	C	1	2	4
Diaphragm pump type N3 KPE/KP18; N5 KPE/KP18					
90P2100	Square cap type D3, 1/8" female for N3/N5 KPE/KP18, Material: PVDF	S	-	-	1
90P2120	Diaphragm type S3, for N3/N5 KPE/KP18, Material: Viton®, PTFE coated	C	1	2	3
90P2111	Valve reed type V3 with O-ring type O3, for N3-N5, 1 pc, material: Viton® (2 pieces required)	C	2	4	6
90P2105	Intermediate plate type Z3, for N3/N5 KPE/KP18, Material: PVDF	S	-	-	1
Diaphragm pump type N9 KPE/KP18					
90P2200	Square cap type D9, 1/8" female for N9 KPE/KP18, Material: PVDF	S	-	-	1
90P2220	Diaphragm type S9, for N9 KPE/KP18, Material: Viton®, PTFE coated	C	1	2	3
90P2211	Valve plate with seal for N9 KPE, 1 pc., material: Viton®. (2 pcs./pump necessary)	C	2	4	6
90P2205	Intermediate plate type Z9, for N9 KPE/KP18, Material: PVDF	S	-	-	1

Sampling System Versions SS5C, SS5C-19", SS5C/2 and SS5C/3 (C) consumable parts, (R) recommended spare parts, (S) spare parts

		Recommended quantity during operation [years]			
		C/R/S	1	2	3
Option flowmeter FM40:					
90A0015	Flowmeter glass for FM40 range 7 to 70 l/h air	S	-	1	1
94F0010	Flowmeter glass for FM40 range 15 to 150 l/h air	S	-	1	1
94F0015	Flowmeter glass for FM40 range 25 to 250 l/h air	S	-	1	1
94F0020	Flowmeter glass for FM40 range 50 to 500 l/h air	S	-	1	1
90A0018	Viton® O-ring 9 for flowmeter glass FM40	R	2	4	6
Diverse:					
90K6030	Fine fuse 4 A, time-delayed, 5 x 20 mm	R	5	5	5
90G0020	Fine fuse 10 A, time-delayed, 5 x 20 mm with option temp. controller and heated sample line	R	5	5	5
Hose and hose fittings:					
05V3215	Bulkhead union SV-PVDF DN 4/6 SS5C optional PVDF = Polyvinylidenfluoride	R	2	2	2
05V6600	Sealing ring 4/6 PVDF see above	R	5	10	10
05V6605	Union nut M10-4/6 PVDF see above	R	5	10	10
01T2000	Hose Novoprene DN 3,2/6,4 (per meter)	S	1	2	3
02B1000	Hose PTFE DN 4/6 (per meter)	S	1	2	3
10T1000	Hose cutter	S	1	1	1

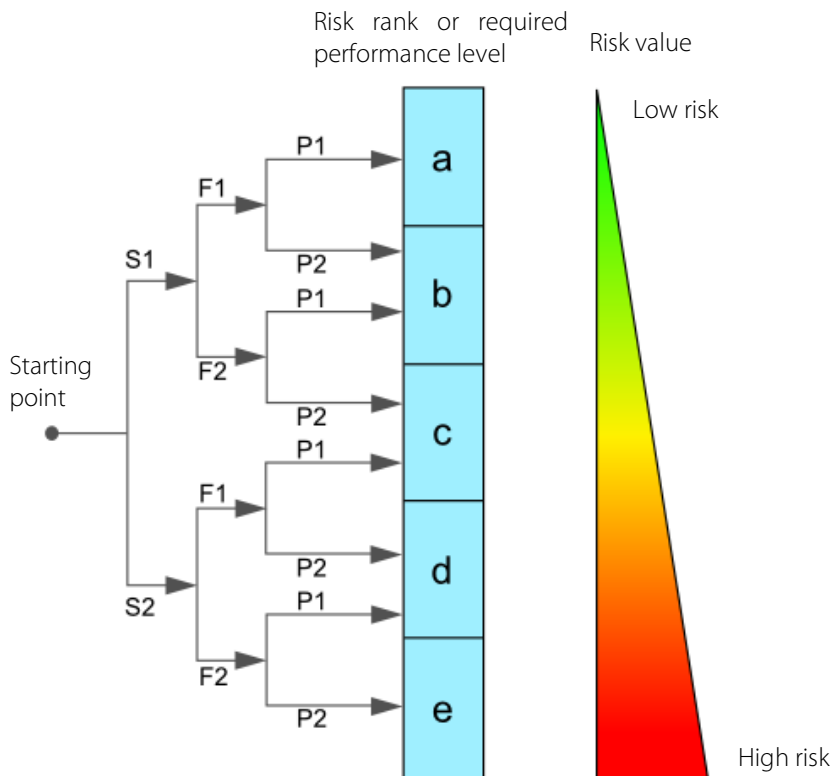
27 RISK ASSESSMENT

The risk assessment provided in this chapter is intended for all work activities on the product. The hazards can occur in the work steps of assembly, commissioning, maintenance, disassembly and in the event of a product fault. During normal operation, the product is protected by a system cabinet or appropriate covers.

Only qualified personnel is permitted to perform the work. The following minimum knowledge is required for the work:

- Employee instruction provided in process engineering
- Employee instruction provided in electrical engineering
- Detailed knowledge of the instruction manual and the applicable safety regulations

The product complies with the current regulations according to state-of-the-art science and technology. Nevertheless, not all sources of danger can be eliminated while observing technical protective measures. Therefore, the following risk assessment and the description of exposure hazards refer to the work steps mentioned above.



Severity of injury:

S1 = 1 = minor (reversible injury)
 S2 = 2 = serious (irreversible injury, death)

Frequency and duration:

F1 = 1 = infrequent or short exposure to hazard
 F2 = 2 = frequent (more than once per hour/shift)

Possibility of preventing or limiting the damage

P1 = 1 = possible
 P2 = 2 = hardly possible

Figure 16 Overview risk assessment



Aggressive condensate possible

Risk rank group A

Chemical burns due to aggressive media possible!
 This applies to all liquids in vessels and in the product.
 In general, for electrical and mechanical work on the product, wear personal protective equipment (PPE) in accordance with the risk assessment.



Caution risk of being crushed by rotating parts

Risk rank - group A

The product contains rotating parts. Do not open covers until the device has been switched off.



Caution glass

Risk rank - group A

The product contains glass components. In general, for electrical and mechanical work on the product, wear personal protective equipment (PPE) in accordance with the risk assessment.



Caution hot surfaces

Risk rank group A

The temperature inside the product can be higher than $> 60\text{ }^{\circ}\text{C}$.

The hot parts are shielded by mechanical devices. Before opening the products, they must be disconnected from the power supply and a cooling time of more than > 20 minutes must be observed. In general, for electrical and mechanical work on the product, wear personal protective equipment (PPE) in accordance with the risk assessment.



Caution electric shock

Risk rank group C

When installing high-power systems with nominal voltages of up to 1000 V, the requirements of VDE 0100 and their relevant standards and regulations must be observed!

This also applies to any connected alarm and control circuits. Before opening the products, they must always be disconnected from the power supply.



Gas hazard

Risk rank group A-B-C

The hazard potential mainly depends on the gas to be extracted.

If toxic gases, oxygen displacing or explosive gases are conveyed with the product, an additional risk assessment by the operator is mandatory.

In principle, the gas paths must be purged with inert gas or air before opening the gas-carrying parts.

The escape of potentially harmful gas from the open process connections must be prevented.

The relevant safety regulations must be observed for the media to be conveyed. If necessary, flush the gas-carrying parts with a suitable inert gas. In the event of a gas leakage, the product may only be opened with suitable PPE or with a monitoring system.

Furthermore, the work safety regulations of the operator must be observed.



Caution crushing hazard

Risk rank group A

The work must be performed by trained personnel only.

This applies to products weighing less than < 40 kg [≈ 88.2 lbs]:

The product can be transported by 1 to 2 person(s). The instructions for appropriate personal protective equipment (PPE) must be observed.

The weight specifications are contained in the technical data of this product.

Furthermore, the work safety regulations of the operator must be observed.

28 APPENDIX

- Circuit diagram **SS5C, SS5C-19", SS5C/2 and SS5C/3**
- Table of Parameter Codes



More product documentation is available in our Internet catalogue:
www.mc-techgroup.com

- Instruction manual: Electric gas cooler **ECPX000C**
- Data sheet: Universal-Filters **FP, FT, FPK, FS, FSS**
- Instruction manual: **Diaphragm pump Series N**
- Instruction manual: Peristaltic pump **SR25.2-W**
- Instruction manual: Liquid alarm sensor **LA1S**
- Data sheet: Flow meter **FM40**
- Data sheet : Ball valves **L/PV-1**
- Instruction manual: Temperature controller **701**

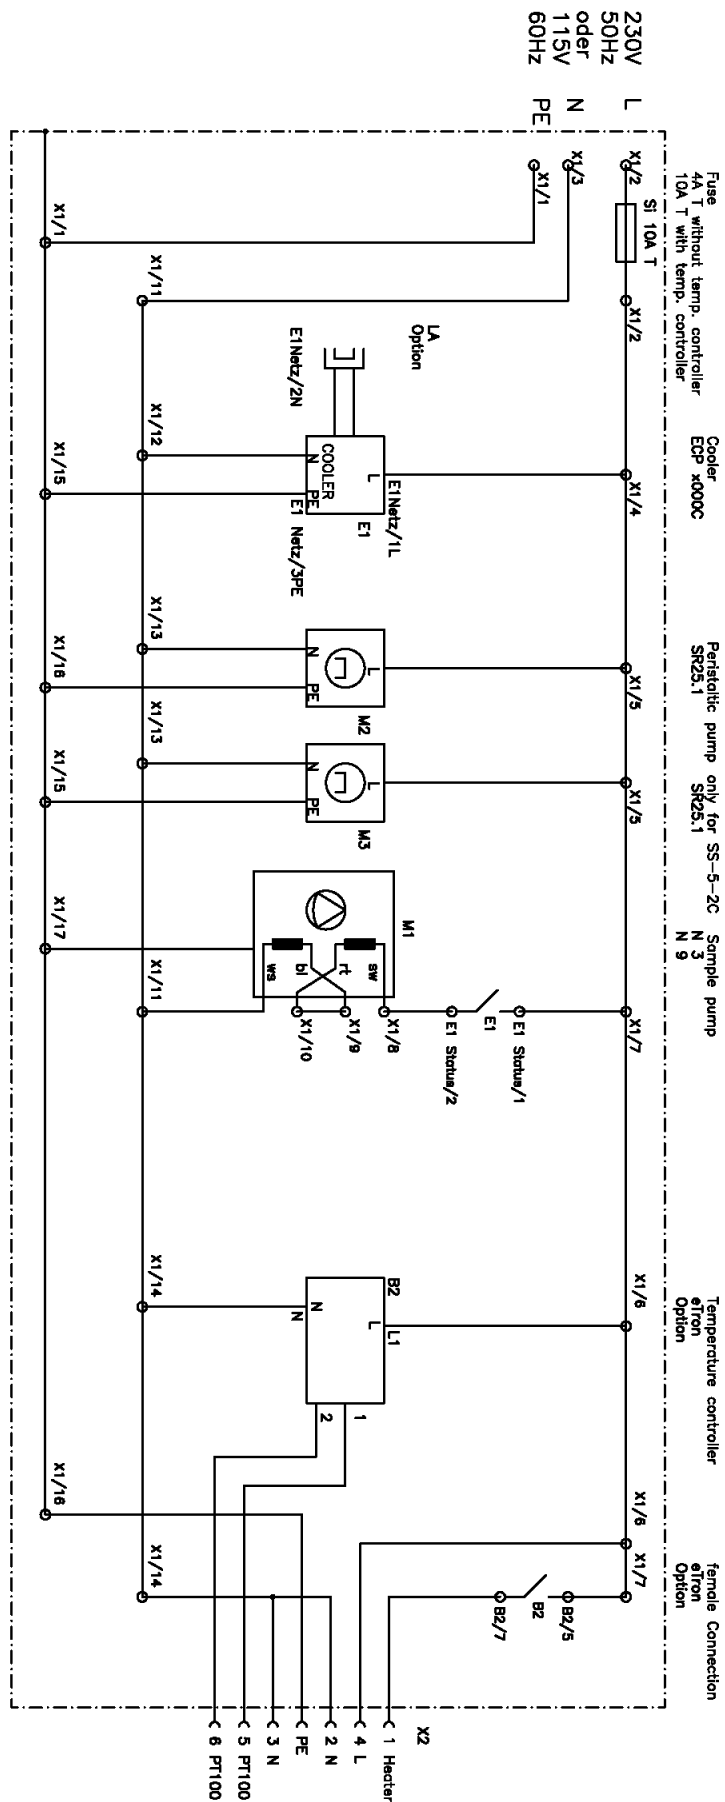









Figure 17 Circuit diagram SS5C, SS5C-19", SS5C/2 and SS5C/3

Table of Parameter Codes

No.	Description:	Default:	Range:	Note:
1	Software version			
5	Brightness setting of display	5	0 - 9	Brightest display setting is 9
10	LA on/off switching	0	0,1,2	0=off; 1= without cable break detection; 2= with cable break detection
11	Sensitivity LA	2	1-7	The higher the value is, the sooner the alarm is triggered.
12	HIGH dT	3	2 - 8 [°C]	Differential temperature between set point and upper temperature alarm limit
13	LOW dT	3	2 - 8 [°C]	Differential temperature between setpoint and lower temperature alarm limit
14	Hysteresis (temperature alarm)	2	1,2 [°C]	As soon as a temperature alarm limit of "2" is selected, the hysteresis is automatically reduced to 1
15	mA range selection	4-20	0-20 / 4-20 [mA]	Corresponds to the temperature range: -10 °C to +50 °C (4 – 20 mA: at 5 °C = 8 mA)
70	Operating time in days			This value will not be deleted even after restarting
84	Fan speed	1	0-5	Value has no influence on the output power
210	Calibration LA dry			Connect the sensor and confirm with the  -key.
211	Calibration LA wet			Hold the sensor in water and confirm with the  -key.
212	Calibration LA open / cable break			Disconnect the sensor and confirm with the  -key. The cable break detection triggers in the middle between this value and that of dry.
213	Display LA dry			Check here the current value
214	Display LA wet			Check here the current value
215	Display LA open			Check here the current value
310	mA output LOW Calibration	1 mA		Connect the multimeter and press or hold  or  -keys until the display matches 1mA .
311	mA output HIGH Calibration	20 mA		Connect the multimeter and press and hold  or  -keys until the display matches 20 mA .